


# ENJOY BASIC2

## USER GUIDE



### CHAIR PARTS TOOLS ▶

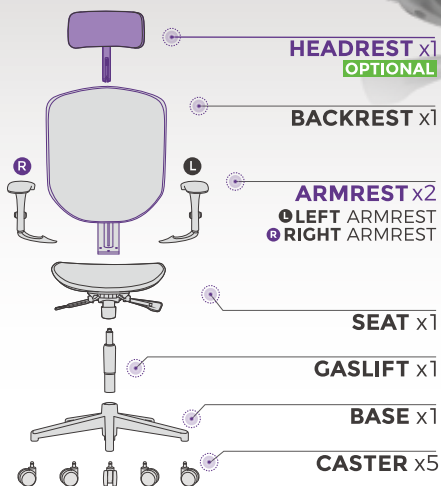

ALLEN  
WRENCH



**A** FOR  
ARMREST


— — — (SPARE)  
1/4 x 1"

**B** FOR  
BACKREST


— — — (SPARE)  
M8x22mm

### ASSEMBLY STEPS ▶


STEP 1

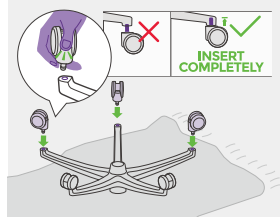

STEP 2

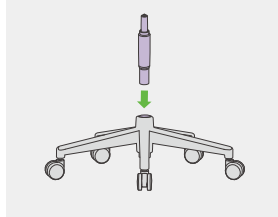


STEP 3

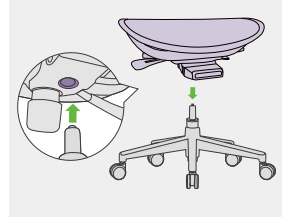

STEP 4




STEP 5

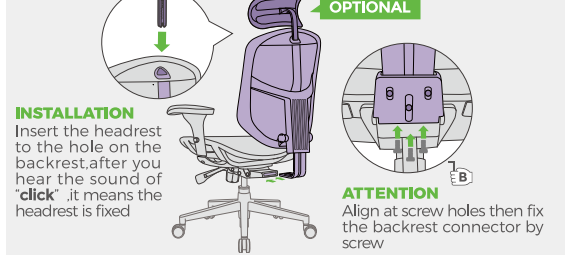

CONTROL

DUAL LEVER CONTROL ▶

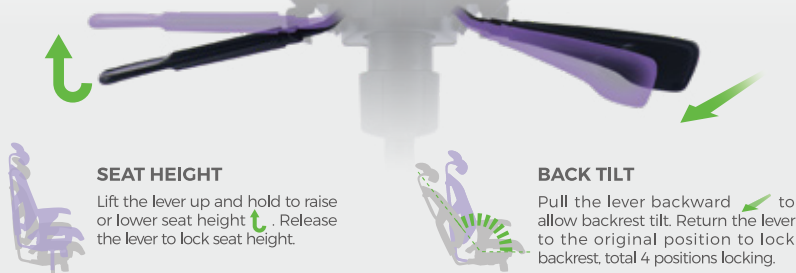

SEAT HEIGHT

Lift the lever up and hold to raise or lower seat height ↑. Release the lever to lock seat height.

BACK TILT

Pull the lever backward ↖ to allow backrest tilt. Return the lever to the original position to lock backrest, total 4 positions locking.

BACK & LUMBAR

BACK HEIGHT ADJUSTMENT ▶



6 adjustable height position with 70mm range. When you raise to the top, it can be unlocked and free to adjust to the original position

◀ LUMBAR SUPPORT ADJUSTMENT



- ● ● Rotating towards to the direction of **large dots is to strengthen** the lumbar support
- ● ● Rotating towards to the direction of **small dots is to soften** the lumbar support

RECLINE

RECLINE POSITION LOCKING ▶




◀ BACK TILT TENSION




ARMREST & HEADREST

3D ARMREST ▶

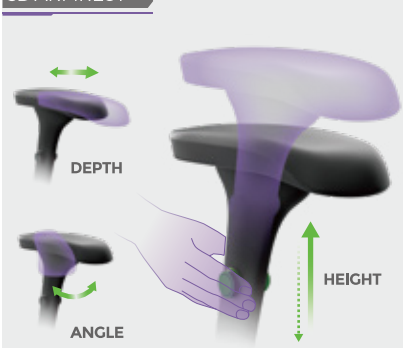

When the armrest raise to the top, it will be unlocked and free to adjust to the original position

◀ 2D HEADREST (OPTIONAL)

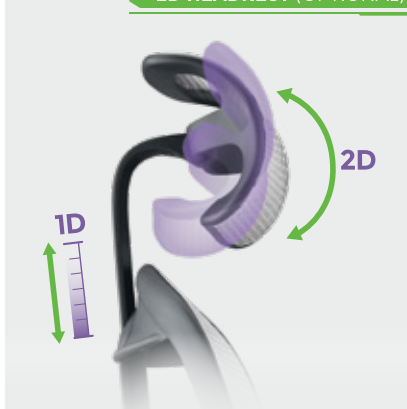

**ENJOY**  
**BASIC2**